
SQM-160

Rate/Thickness Monitor

User's Guide

Version 4.09

 **INFICON**

Safety Information

Read this manual before installing, operating, or servicing this equipment. Do not install substitute parts, or perform any unauthorized modification of the product. Return the product to Sigma Instruments... Now part of INFICON for service and repair to ensure that safety features are maintained.

Safety Symbols

WARNING: Calls attention to a procedure, practice, or condition that could possibly cause bodily injury or death.

CAUTION: Calls attention to a procedure, practice, or condition that could possibly cause damage to equipment or permanent loss of data.



Refer to all manual Warning or Caution information before using this product to avoid personal injury or equipment damage.



Hazardous voltages may be present.



Earth ground symbol.



Chassis ground symbol.



Equipotential ground symbol.

Warranty Information

This INFICON product is warranted against defects in material and workmanship for a period of two (2) years from the date of shipment, when used in accordance with the instructions in this manual. During the warranty period, INFICON will, at its option, either repair or replace products that prove to be defective.

Limitation of Warranty

Defects from, or repairs necessitated by misuse or alteration of the product, or any cause other than defective materials or workmanship are not covered by this warranty. NO OTHER WARRANTIES ARE EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. UNDER NO CIRCUMSTANCES SHALL INFICON BE LIABLE FOR CONSEQUENTIAL DAMAGES RESULTING FROM A BREACH OF THIS LIMITED WARRANTY, OR OTHERWISE.

Table of Contents

Chapter 1 Quick Start

| | |
|------------------------------|-----|
| 1.0 Introduction | 1-1 |
| 1.1 Installation..... | 1-1 |
| 1.2 Front Panel..... | 1-2 |
| 1.3 Rear Panel..... | 1-3 |
| 1.4 System Connections | 1-4 |
| 1.5 Film Setup..... | 1-5 |
| 1.6 Depositing a Film..... | 1-6 |

Chapter 2 Operation

| | |
|---------------------------------------|------|
| 2.0 Introduction | 2-1 |
| 2.1 Menu Selection | 2-1 |
| 2.2 Film Menu | 2-2 |
| 2.3 System Menu | 2-4 |
| 2.4 Sensor Selection..... | 2-7 |
| 2.5 Sensor Frequency..... | 2-8 |
| 2.6 Sensor Tooling | 2-9 |
| 2.7 Display Units | 2-10 |
| 2.8 Crystal Life..... | 2-10 |
| 2.9 Zero Thickness..... | 2-11 |
| 2.10 Shutter Operation..... | 2-11 |
| 2.11 Dual Sensors..... | 2-12 |
| 2.12 Rate Sampling..... | 2-13 |
| 2.13 Time Setpoint..... | 2-14 |
| 2.14 Thickness Setpoint..... | 2-15 |
| 2.15 Simulate Mode | 2-16 |
| 2.16 Relay Operation | 2-16 |
| 2.17 Analog Output Configuration..... | 2-17 |
| 2.18 Troubleshooting..... | 2-18 |

Chapter 3 Options

| | |
|----------------------------|-----|
| 3.0 Rack Installation..... | 3-1 |
|----------------------------|-----|

Chapter 4 Maintenance

| | |
|------------------------|-----|
| 4.0 Introduction | 4-1 |
| 4.1 Cleaning..... | 4-1 |

Appendix

- A. Material Parameters
 - B. Specifications
 - C. I/O Connections
 - D. Communications
 - E. Declaration of Conformity
-



Appendix 4: Maintenance

1. The following table lists the maintenance tasks that should be performed on a regular basis. The frequency of these tasks is determined by the manufacturer's recommendations and the operating conditions of the equipment.

Appendix 5

- A. Safety Precautions
- B. Troubleshooting
- C. Parts List
- D. Maintenance Schedule
- E. Operation of the Machine



1.0 Introduction

Congratulations on your purchase of the SQM-160 Deposition Rate/Thickness Monitor. The SQM-160 is an easy-to-use instrument for measuring many types of thin-film coatings. This chapter will help to get you up and running quickly. Please review the entire manual for detailed operational, programming, and safety information.

1.1 Installation


This section assumes you are familiar with thin-film monitors. Refer to Sections 1.3 and 1.4 for detailed system hookup information.

WARNING: Maintain adequate insulation and physical separation of sensor, I/O, and wiring from hazardous voltages.

| | |
|-------------------------|--|
| Rack Installation | The SQM-160 occupies a 3.5" high, half-rack space. Rack installation requires an optional half-rack adapter kit (900-014) or a full rack extender kit (900-008). Install the unit in a 19" rack with the appropriate hardware. See Chapter 3 for extender assembly instructions. |
| Power Connection | WARNING: Verify that the power cable provided is connected to a properly grounded mains receptacle. |
| Sensor Connections | Connect the BNC cables and oscillator from your vacuum chamber feedthrough to the SQM-160 Sensor Input(s). See section 1.4. |
| Digital I/O Connections | Refer to Appendix C for details on wiring digital I/O to the SQM-160 Relay I/O connector. |
| Computer Connection | If you would like to use the supplied Windows™ Comm software with the SQM-160, see Appendix D. |
| Option Connections | If you have purchased the optional Four Sensor Card, connect the four additional sensors to these four inputs. |

Move the rear panel power switch to the On (I) position. The SQM-160 will briefly display its software and hardware versions, then go to normal operating mode.

1.2 Front Panel

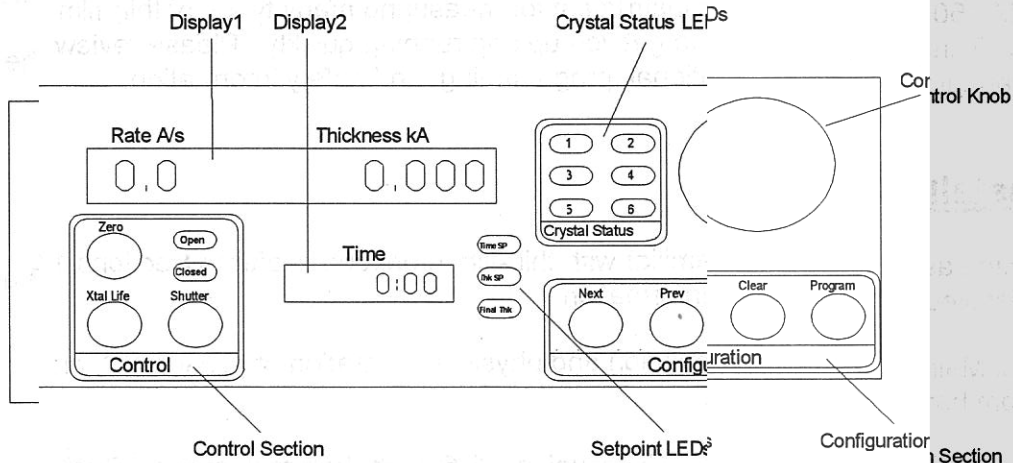


Front Panel Controls


- Display 1** Displays rate/thickness or frequency in normal operation. If multiple sensors are being used, and Display shows Time, then this is the average of those sensors. Turn the Control Knob right to display each individual sensor's readings. Displays the setup parameter name in program mode.
- Display 2** Displays deposition time, or the sensor # displayed on Display 1 when scrolling through sensor readings. Displays setup parameter values in program mode.
- Control Section** Pushbutton to zero the thickness reading. Pushbutton to toggle display between Crystal Life and Rate/Thickness readings. Pushbutton to Open/Close shutter relay. Two LED shutter relay status display.
- Configuration Section** Pushbutton to enter/exit program mode. Pushbutton to cancel a change and return to original value. Pushbuttons to move to Next/Previous parameter.
- Setpoint LEDs** Illuminates when the indicated setpoint is reached.
- Crystal Status LEDs** Illuminates when the crystal is active and operating properly. Flashes when an active crystal fails. Off when that crystal is not being used.
- Control Knob** Used to adjust values or scroll through menu selections. Pushing the control knob stores the current setting.

Chapter 1

1.3 Rear Panel

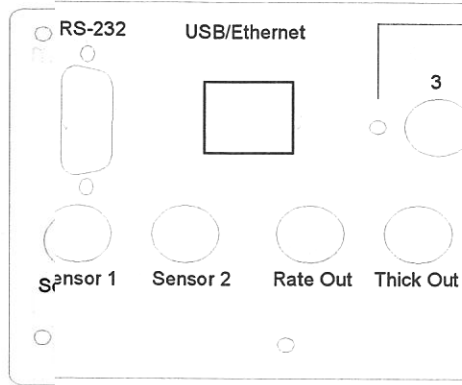


Rear Panel
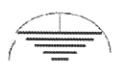
| | |
|---|-------------------------------------|
| Sensor 1 & 2 | Connection to detailed hook |
| Rate and Thick Outputs | Provides 0-5V thickness read |
| Relay I/O | Connects 4 rel. Appendix C for |
| RS-232 | Connection to See Appendix |
| USB/Ethernet | Optional connection programming a |
| Option Card | Provides four a |
|  | Measurement cable ground |
| Power Connector | WARNING: Use type and rating |

1.4 System Connections

The diagram shows typical vacuum system wiring. The table identifies each component's function.

WARNING: Maintain adequate insulation and physical separation of sensor wiring from hazardous voltage.

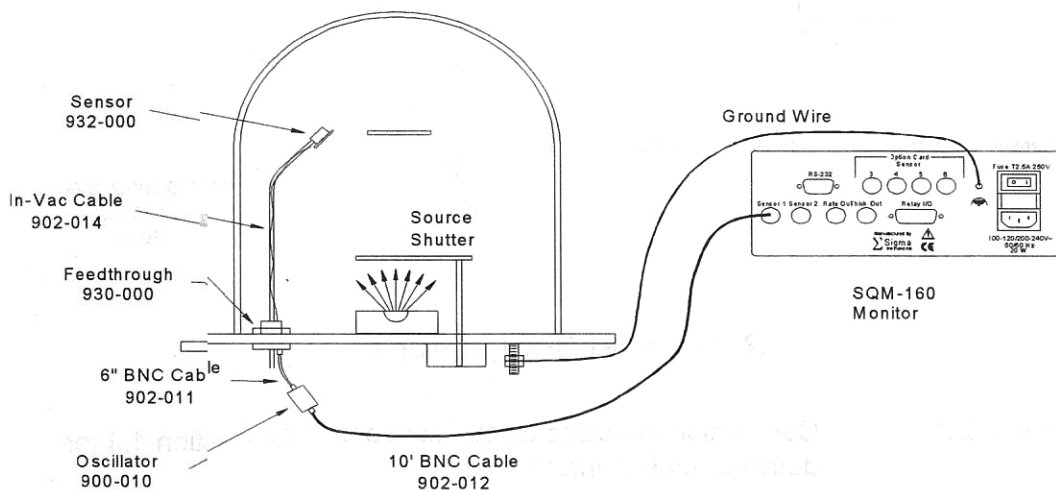

System Components

| | |
|---------------|--|
| Sensor | Holds the quartz crystal used to measure rate and thickness. Crystals must be replaced occasionally. |
| In-Vac Cable | Microdot cable that connects the sensor to the feedthrough. |
| Feedthrough | Provides isolation between vacuum and atmosphere for electrical and cooling lines. |
| 6" BNC Cable | Provides a flexible connection from the feedthrough to the oscillator. Keep this cable as short as possible. |
| Oscillator | Contains the electronics to operate the quartz crystal. Total cable length to the crystal should be under 40" (1 meter). |
| 10' BNC Cable | Connects the oscillator to the SQM-160. Lengths up to 100' (30 meters) are acceptable. |
| Ground Wire | A wire, preferably braided, that connects the vacuum system to the SQM-160 ground terminal. |

1.5 Film Setup

This section will help you set up the SQM-160 to measure a film. Refer to Chapter 2 for detailed programming instructions.

Note: User actions with front panel controls are indicated by a **Box**. Results shown on displays are indicated by a **Dashed Box**.

- Enter Program Mode** Press **Program** to enter the film setup menu. If the Crystal Life display is shown, first press **Crystal Life** to return to Rate/Thickness mode then press **Program**.
- Select a Film** Turn the **Control Knob** to select one of the 99 possible films, then press the **Control Knob** to enter that Film Menu.
- Set Film Parameters** Turn the **Control Knob** to set the first film parameter (Density). The parameter value is shown in **Display 2**. Press the **Control Knob** to save the value and move to the next parameter. If you press **Clear**, the film parameter returns to its original value. Continue to set each parameter. Be sure to press the **Control Knob** to store each parameter. Press **Program** to exit Program mode and return to normal mode.
- Set System Parameters** To Enter the System Menu, press **Program**, then **Prev**. Set system parameters by turning, then pushing, the **Control Knob** as described above. Press **Program** to return to Normal mode.

If the Crystal Status LEDs should be lit. If not, return to the Film Menu and set the Sensor Page parameter to the desired sensor(s). See Section 2.4 for detailed information on assigning sensors to a film.

If the Crystal Status LED is flashing, it is most likely that the sensor is not properly connected. A small test crystal, supplied with each oscillator module, can be used to connect sensor connections external to the vacuum chamber. To use the test crystal, disconnect the oscillator from its 6" BNC cable. Attach the test crystal to the oscillator's through connector. The Crystal Status LED will remain lit if the external sensor connections are correct.

Refer to the Troubleshooting section of Chapter 2 for assistance in troubleshooting sensor problems.

Chapter 1

1.6 Depositing a Film

If you have followed this Quick Start procedure below to begin deposition

Verify Sensor Operation Verify that the sensor is lit, and not

Display Rate/Thickness Display 1: should be the right. In the Crystal Life s Program Mod mode.

Zero Thickness If needed, pre

Start Deposition Apply power to shutter release when the source

The Rate and Thickness displays sh

If the displays remain at zero, check that the de

If the display is erratic or noisy, first of Chapter 2 Troubleshooting section cause of noisy readings.

If the rate and thickness readings do Parameter (Density, Z-Factor, Toolin

Please take time to review the remaining programming, and safety information

Introduction

The system is designed to be used in a variety of ways. It can be used as a...

The system is designed to be used in a variety of ways. It can be used as a...

3.1 Menu Selection


Two main groups of the 8086-100 programming. The first group shows you...

The second group shows you how to use the system. It includes the...

The system is designed to be used in a variety of ways. It can be used as a...

The system is designed to be used in a variety of ways. It can be used as a...

The system is designed to be used in a variety of ways. It can be used as a...

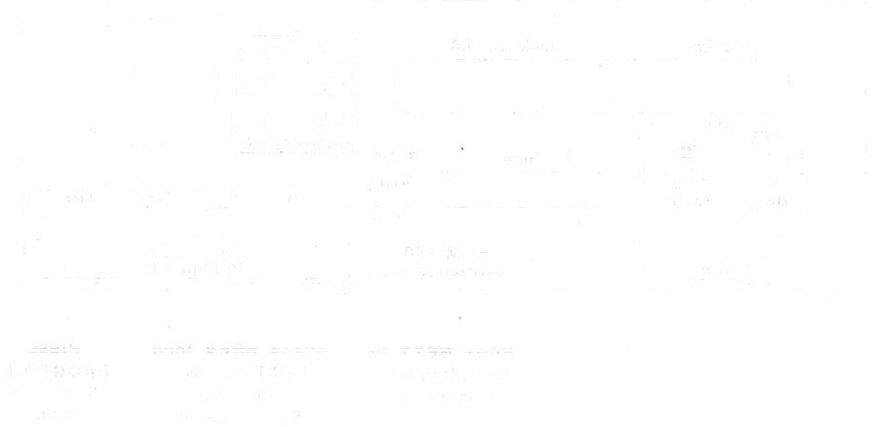

2.0 Introduction

This section details the operation of the SQM-160 menus and front panel controls. It is arranged by common user tasks.

Note: User actions with front panel controls are indicated by a **Box**. Results shown on displays are indicated by a **Dashed Box**.

2.1 Menu Selection


Two menus provide control of the SQM-160 programming. The Film Menu allows you to customize each of the stored films. The System Menu sets values that remain constant for all films.

The Configuration Section of the SQM-160 front panel contains four switches used to access the program menus. Within the program menus, the **Control Knob** is also used to adjust values and select menu choices. In program mode, **Display 1** shows the parameter to be changed. **Display 2** shows the selected parameter's value.

Note: If Crystal Life is shown on the SQM-160 displays, press the Xtal Life switch to return the displays to normal rate/thickness or frequency display.

To enter the Film Menu, press the **Program** switch. The SQM-160 displays the currently selected film. If desired, turn the control knob to select a different film. Press **Next** to display the first parameter for the selected film.

To enter the System Menu, press the **Program** switch. Then press **Prev** before any other switches.

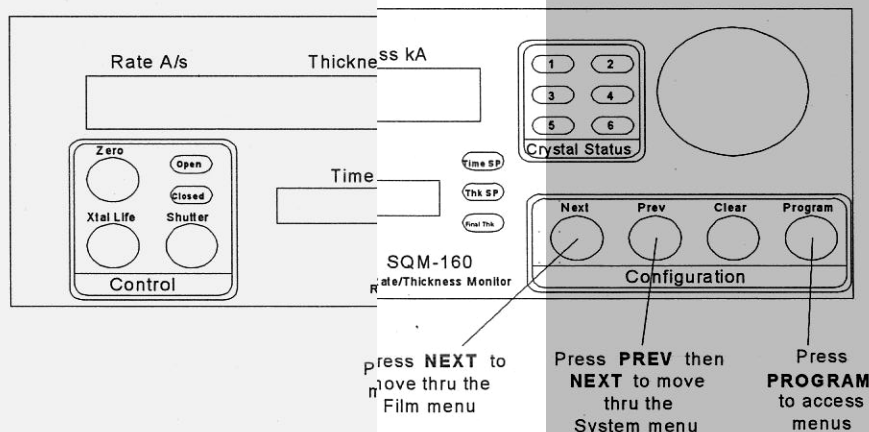


2.2 Film Menu

The Film Menu programs the SQM-160 for the materials that will be deposited as thin films. Ninety nine films can be stored, but only one film is active at any time.

1. Press **Program** to enter program mode.
2. Use the **Control Knob** to scroll to the desired Film # (1-99).
3. Depress the **Control Knob** or **Next** to enter the film parameters for the selected film.
4. Use **Next** and **Prev** to move through the film parameters, shown in **Display 1**.
5. Use the **Control Knob** to adjust the parameter value, shown in **Display 2** to the desired setting.
6. Depress the **Control Knob** or **Next** to save the displayed value and move to the next material parameter. Press **Clear** to abandon the change and return to the original setting.
7. Press **Program** to exit the Film Menu and return to normal mode.

The diagram and table that follow detail the parameters available in the Film Menu. Refer to later sections of this chapter for instructions on setting specific film parameters.

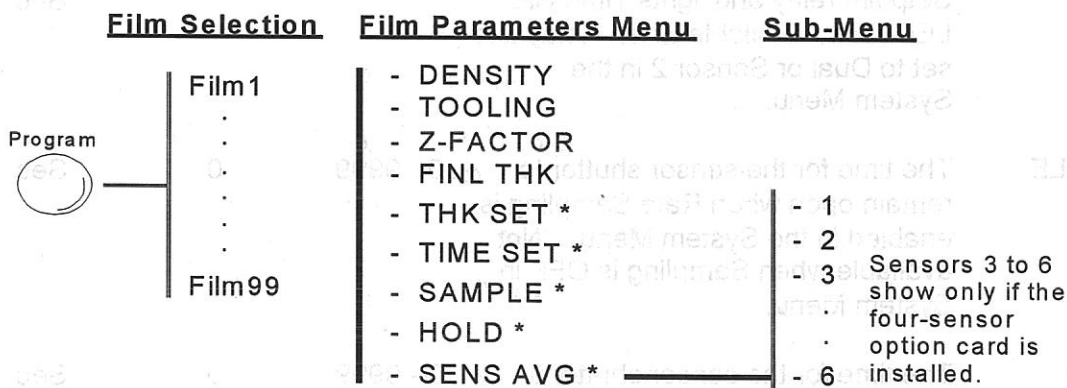


Note: Depending on System Menu setup, selections marked with a * may not be available. Consult the table that follows for details.

Note: You can clear film memory by pressing Zero-XtalLife-Shutter while powering up the SQM-160.

Film Menu

| Display | Description | Range | Default | Units |
|-----------------|--|---------------|----------------|--------------|
| DENSITY | Density of the material being deposited. Consult the Appendix for common material densities. | 0.5 – 99.99 | 1.00 | gm/cc |
| TOOLING | Overall Tooling Factor for this film. See the Sensor Tooling section of this chapter. | 10 – 399 | 100 | % |
| Z-FACTOR | Z-Factor of the material being deposited. Consult the Appendix for common material Z-Factors. | 0.10 – 10.00 | 1.0 | |
| FINL THK | Desired Final Thickness of deposited material. Lights Final Thk LED when reached. | 0.000 – 99.99 | 0.500 | kÅ |
| THK SET | Thickness value that closes the Thickness Setpoint relay and lights Thk SP LED. *Not available when Sampling is ON in System Menu. | 0.000 – 99.99 | 0 | kÅ |
| TIME SET | Elapsed time that closes the Timer Setpoint relay and lights Time SP LED. *Not available when Relay 2 is set to Dual or Sensor 2 in the System Menu. | 0:00 – 99:59 | 0 | Min: Sec |
| SAMPLE | The time for the sensor shutter to remain open when Rate Sampling is enabled in the System Menu. *Not available when Sampling is OFF in System Menu. | 0 - 9999 | 0 | Sec |
| HOLD | The time for the sensor shutter to remain closed when Rate Sampling is enabled in the System Menu. *Not available when Sampling is OFF in System Menu. | 0 - 9999 | 0 | Sec |


| | | | |
|-----------------|---|----------------------|----------------|
| SENS AVG | Enable/disable crystals for this film. See the Sensor Selection section of this chapter. *Not available when Relay 2 is set to Dual in the System Menu. | Enabled/ Disabled | Ch1 Enabled |
|-----------------|---|----------------------|----------------|

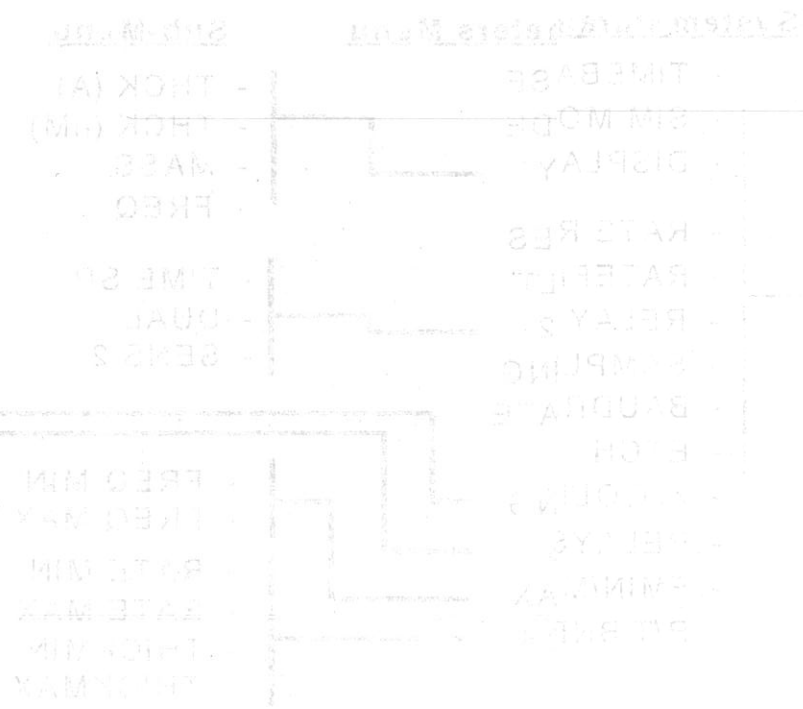

2.3 System Menu

The System Menu sets values that pertain to the overall functions of the SQM-160 and to your vacuum system's setup. System Menu parameters apply to all films.

1. Press **Program** to enter program mode.
2. Press **Prev** to enter the System Menu.
3. Use **Next** and **Prev** to move through the system parameters.
4. Use the **Control Knob** to adjust the parameter value shown in **Display2** to the desired setting.
5. Press **Clear** to abandon the change and return to the original setting.
6. Depress the **Control Knob** or **Next** to save the displayed value and move to the next material parameter. Press **Clear** to abandon the change and return to the original setting.
7. Press **Program** to exit the System Menu and return to normal mode.

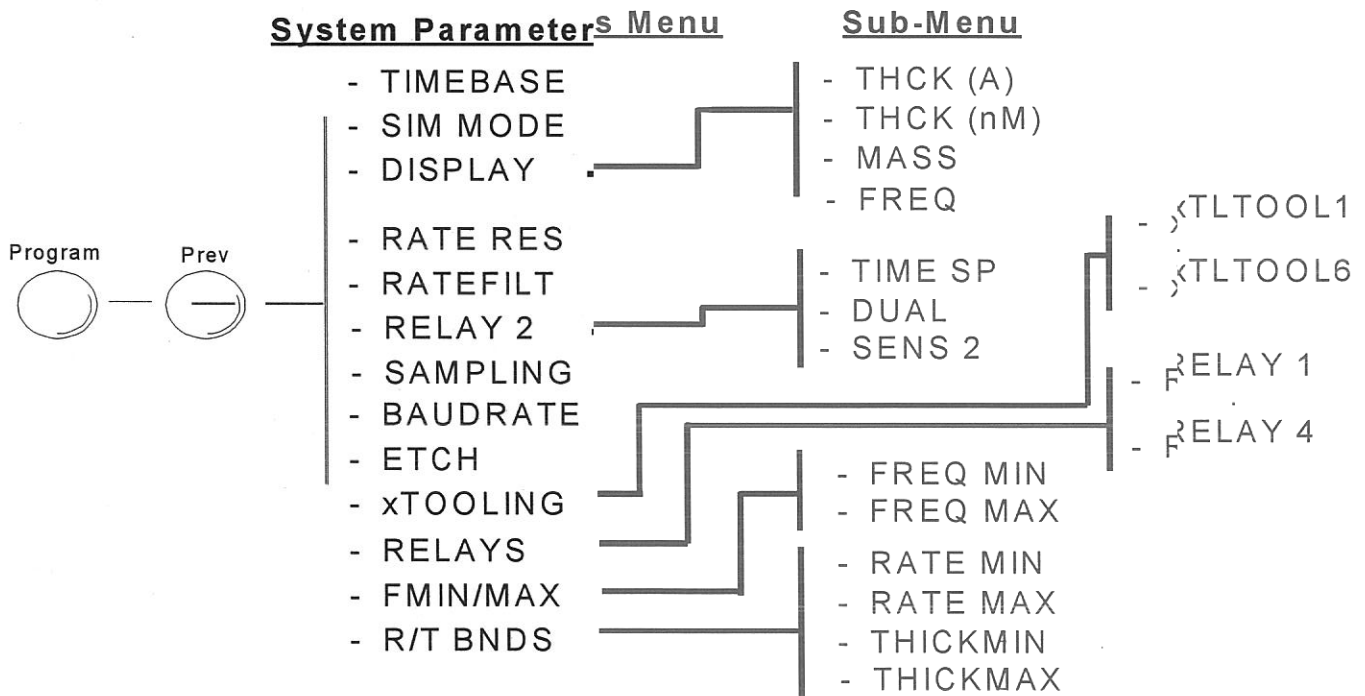

System Menu

| <u>Display</u> | <u>Description</u> | <u>Range</u> | <u>Default</u> | <u>Units</u> |
|----------------|--|-------------------------|----------------|--------------|
| TIMEBASE | Time required for a measurement. Longer times yield higher accuracy. | 0.15 – 2.00 | 0.25 | Sec. |
| SIM MODE | Simulates sensor inputs. | On/Off | Off | |
| DISPLAY | Selects Rate/Thickness in Angstroms, Rate/Thickness in Nanometers, Frequency, or Mass (ugm/cc) display. | THCK/nAnM/ FREQ/MASS | Rate | |
| RATE RES | Sets rate resolution to .01 or .1 Å/s. | Hi/Low | Low | |
| RATEFILT | Number of rate readings averaged. | 1 – 20 | 8 | |
| RELAY 2 | Select Timer to cause relay to close when time setpoint is reached. Dual causes relay to close (to activate dual sensor) when sensor 1 fails. Sensor 2 causes relay to activate a sensor shutter when Sensor 2 is assigned to a film. | On/Off | Timer | |
| SAMPLING | When Sampling is ON the sensor shutter periodically “samples” the rate. After a period, the shutter closes and the SQM-160 “holds” the same rate reading until the next sample period. Sample and Hold times are set in the Film Menu. | On/Off | Off | |
| BAUDRATE | Serial baud rate to PC. | 2.4 – 19.2 | 19.2 | kbps |
| ETCH | Sets rate negative for etching. | On/Off | Off | |
| xTOOLING | Tooling value assigned to each sensor. See the Sensor Tooling section of this chapter. | 10 – 399 | 100 | % |
| RELAYS | Assigns normally open or normally closed operation for each relay. <i>Note: All relays are open with power off.</i> | NO/NC | NO | |

| | | | | |
|-----------------|--|-------------|------|-----|
| FMIN/MAX | Sub-menu sets minimum and maximum crystal frequencies. | 4.00 – 6.00 | 5.00 | MHz |
| R/T BNDS | Rate and Thickness Bounds sub-menu for analog outputs. | 4.10-6.10 | 6.10 | |
| RATE MIN | Deposition Rate for zero output (zero Volts). | 0 – 999 | 0 | Å/s |
| RATE MAX | Deposition Rate for full scale output (+5 Volts). | 9.9 – 999 | 100 | Å/s |
| THICKMIN | Thickness for zero output (zero Volts). | 0 – 99.99 | 0.00 | kÅ |
| THICKMAX | Thickness for full scale output (+5 Volts). | 0 – 99.99 | 1.00 | kÅ |

Chapter 2

2.4 Sensor Selection

The SQM-160 comes standard with two sensor inputs. Four additional sensors are available by adding a Sensor Option Card for a film. The averaging option provides film, or multiple sensors can be averaged in area, and provides a backup sensor capability. more uniform coverage of the deposition area. If one of multiple sensors assigned to a film fails, the sensor is automatically removed from rate/thickness calculations.

Note: If Relay 2 Dual is selected in the System Menu, Sensors 1 and 2 are set up as a primary/secondary sensor pair. In that case, sensor averaging is disabled. See Section 2.11 for information on dual sensors.

To assign a sensor, or sensors, to a film:

1. Press **Program** to enter Program mode.
2. Use the **Control Knob** to scroll to the desired Film # (1-9).
3. Depress the **Control Knob** or **Next** to enter the film parameters for the selected film.
4. Press **Next** until **SENS AVG** is shown.
5. Use the **Control Knob** to scroll through the sensors in **Display2**.
6. Depress the **Control Knob** to toggle the sensor on/off.

Sensor status can be seen by observing the Crystal Status LEDs:
 If the LED is not illuminated, the crystal is disabled.
 If the LED is illuminated, the crystal is enabled and receiving valid readings.
 If the LED is illuminated, the crystal is enabled, but is not receiving valid readings.
 If the LED is blinking, the crystal is disabled.

7. Continue selecting sensors until the Crystal Status LEDs indicate the desired setup.
8. Press **Program** to exit the Film Menu and return to normal mode.
9. Turn the **Control Knob** to sequence through each sensor's reading on **Display1**. When a single number is shown in **Display2**, it is the sensor number whose readings are shown in **Display1**. When a time is shown in **Display2**, **Display1** shows the average of all assigned sensors.

2.5 Sensor Frequency

The Sensor Min/Max frequencies establish the operating range for the sensing quartz crystals. Both values are used to determine the % life that is displayed in Xtal Life mode.

When the sensor frequency drops below the minimum (or reads above the maximum), the SQM-160 indicates a sensor failure by blinking the Crystal Status display.

To set sensor minimum and maximum frequencies:


1. Press **Program** to enter Program mode.
2. Press **Prev** to enter the System Menu.
3. Press **Next** until **FMIN/FMAX** is shown.
4. Depress the **Control Knob** to display **FREQ MIN**.
5. Adjust the **Control Knob** to the desired minimum operating frequency on **Display2**.
6. Depress the **Control Knob** to accept the minimum value and display **FREQ MAX**.
7. Adjust the **Control Knob** to the desired maximum operating frequency on **Display2**.
8. Depress the **Control Knob** to accept the maximum value.
9. Press **Program** to exit the System Menu and return to normal mode.

Crystals sometimes fail unexpectedly, or exhibit erratic frequency shifts (mode hopping) before total failure. Depending on the material, crystals may fail well before the typical 5 MHz minimum. If you find that crystals fail early consistently, set FREQ MIN to a value higher than 5 MHz to provide a Crystal Life warning consistent with actual failure.

A sensor whose initial value exceeds the maximum will also cause a blinking Crystal status. You can set the maximum frequency slightly above the nominal values with no effect on accuracy.

2.6 Sensor Tooling

Sensor Tooling adjusts for the difference in deposition rate between the sensor and the substrate being coated. It is an empirically determined value that matches the sensor reading to your vacuum system.

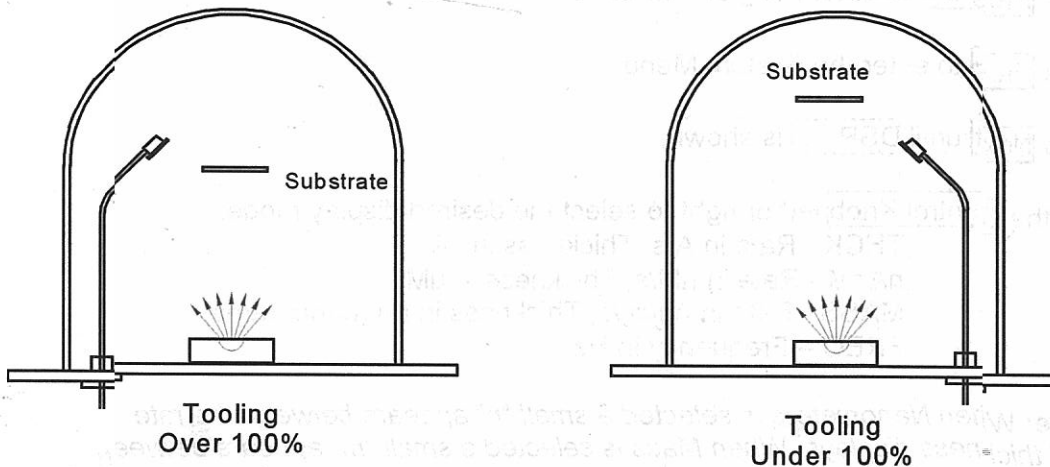

xTooling is set in the System Menu. It adjusts the tooling for each individual sensor before it is averaged. xTooling for a sensor applies to all films. If the individual sensor xToolings are set properly, a sensor failure will not cause a jump in the average Rate and Thickness reading.

To adjust xTooling:

1. Press **Program** to enter Program mode.
2. Press **Prev** to enter the System Menu.
3. Press **Next** until **xTOOLING** is shown, then press the **Control Knob**.
4. Adjust the **Control Knob** to set the **xTLTOOL 1** value. Depress the **Control Knob** to save the value and move to **xTLTOOL 2**.
5. Repeat Step 4 for each of the installed sensors.
6. Press **Program** to exit the System Menu and return to normal mode.

Film Tooling is set in the Film Menu, and is applied to the averaged Rate and Thickness for all sensors assigned to that film. Film Tooling is a film-specific value, and is seldom required.

2.7 Display Units

The SQM-160 can display crystal measurements in several different units. To select the display units:

1. Press **Program** to enter Program mode.
2. Press **Prev** to enter the System Menu.
3. Press **Next** until **DSP.....** is shown.
4. Turn the **Control Knob** left or right to select the desired display mode:
 - THCK - Rate in A/s, Thickness in kA
 - nAnM - Rate in nM/s, Thickness in uM
 - MASS - Rate in ng/cc/s, Thickness in ng (nanograms)
 - FREQ - Frequency in Hz

Note: When Nanometers is selected a small "n" appears between the rate and thickness displays. When Mass is selected a small "m" appears between the rate and thickness displays.

5. Depress the **Control Knob** to accept your choice.
6. Press **Program** to exit the System Menu and return to normal mode.

2.8 Crystal Life

The SQM-160 calculates the remaining crystal life based on the FMin/Max values set in the System Menu (see Section 2.5).

To display the remaining crystal life for the sensors used by the currently active film:

1. Press the **Xtal Life** switch in the front panel Control section.
2. The sensor is shown in **Display 1** and the % remaining life is shown in **Display 2**.
3. Turn the **Control Knob** to display the % life of other sensors active for this film.
4. Press **Xtal Life** again to return to normal rate/thickness, or frequency display.

Note: You cannot enter program mode while the crystal life display is active.

2.9 Zero Thickness

Before starting each film deposition, you will probably want to reset the SQM-160 Thickness value to zero. To zero Thickness:

1. Press the **Zero** switch in the front panel Control section.

In addition to zeroing Thickness, pressing the Zero switch has these effects:

1. The Time display is reset to its programmed value, and starts counting down.
2. The Thickness Setpoint and Timer relays open.
3. The Time SP, Thk SP, and Final Thk LEDs turn off.

2.10 Shutter Operation

The SQM-160 Shutter switch controls a relay that is normally connected to the source shutter.

To open or close the Shutter relay:

1. Press the **Shutter** switch in the front panel Control section.

The Open and Closed LEDs illuminate to indicate the shutter status.

Note: *If Relay 2 is set to Sensor 2 in System Menu, the operation of the Shutter switch/relay changes slightly. In this case, the shutter relay will activate only if Sensor 1 is assigned to the active film. If sensor 2 is assigned to the active film, Relay 2 will close instead.*

2.11 Dual Sensors

Dual shuttered sensors provide a backup (secondary) sensor in case of primary sensor failure. When Relay 2 is programmed for Dual sensors in the System menu, the SQM-160 will automatically switch to Sensor 2 when Sensor 1 readings stop or become erratic.

To program the SQM-160 for dual sensors:

1. Press **Program** to enter Program mode.
2. Press **Prev** to enter the System Menu.
3. Press **Next** until **RELAY 2** is shown.
4. Turn the **Control Knob** right to select DUAL sensor function.
5. Depress the **Control Knob** to accept the value.
6. Press **Program** to exit the System Menu and return to normal mode.
7. In the film menu, assign only Sensor 1 to the film. The backup sensor 2 is automatically assigned internally.

Note: Relay 2 is a multi-function relay. It can be programmed as a dual sensor shutter, or to close when a programmed time has elapsed, or as a sensor 2 shutter relay. See the other Relay 2 functions in Section 2.10 and 2.13 discussed.

2.12 Rate Sampling

In Rate Sampling mode, the SQM-160 opens a sensor shutter for a fixed time to "sample" the process rate, then closes the shutter and "holds" the last rate reading for a fixed time. While the shutter is closed (hold mode), the SQM-160 calculates thickness based on the last sampled rate.

Note: Rate sampling can significantly extend crystal life in a high deposition rate process. However, unless the process is very stable, the thickness calculation during hold mode may be incorrect. Do not use rate sampling if your rate varies during deposition.

To program the SQM-160 for Rate Sampling:

1. Press **Program** to enter Program mode.
2. Press **Prev** to enter the System Menu.
3. Press **Next** until **SAMPLING** is shown.
4. Turn the **Control Knob** right to turn ON rate sampling. Depress the **Control Knob** to accept the value.
5. Press **Program** to exit the System Menu and return to normal mode.
6. Press **Program** to re-enter Program mode.
7. Use the **Control Knob** to scroll to the desired Film # (1-9), then depress the **Control Knob** or **Next** to enter the film parameter menu for the selected film.
8. Press **Next** until **SAMPLE** is shown.
9. Use the **Control Knob** to set the sample time period. Depress the **Control Knob** to accept the sample value and display **HOLD**.
10. Use the **Control Knob** to set the hold time period. Depress the **Control Knob** to accept the hold value.
11. Press **Program** to exit the Film Menu and return to normal mode.

Note: The rate sampling relay is a dual function relay. It can be programmed either to sample rate or to close when a programmed thickness is reached. Section 2.14 discusses the Thickness Setpoint function. Consult Appendix C for relay wiring.

2.1³ Time Setpoint

The Time Setpoint provides a convenient way to signal a timed event. After a pre-programmed time period, the Time Setpoint closes a relay when the Zero switch is pushed.

To program the Time Setpoint:

1. Press **Program** to enter Program mode.
2. Press **Prev** to enter the System Menu.
3. Press **Next** until **RELAY 2** is shown.
4. Turn the **Control Knob** right to select TIME. Depress the **Control Knob** to accept the value.
5. Press **Program** to exit the System Menu and return to normal mode.
6. Press **Program** to re-enter Program mode.
7. Use the **Control Knob** to scroll to the desired Film # (1-9), then depress the **Control Knob** or **Next** to enter the Film Parameter menu for the selected film.
8. Press **Next** until **TIME SET** is shown.
9. Use the **Control Knob** to set the timer setpoint. Depress the **Control Knob** to accept the value.
10. Press **Program** to exit the Film Menu and return to normal mode.

Press **Zero** to open the relay and begin counting down the Time Setpoint. When the time reaches zero, the Time SP LED illuminates and the relay closes.

Note: Relay 2 is a multi-function relay. It can be programmed as a dual sensor shutter, close when a programmed time has elapsed, or as a sensor 2 shutter relay. Section 2.10 and 2.11 discuss the other Relay 2 functions.

2.14 Thickness Setpoint

The Thickness Setpoint closes a relay when a programmed thickness is reached. This setpoint is independent from Final Thickness, which always closes the source shutter.

To program the Thickness Setpoint:

1. Press **Program** to enter Program mode.
2. Press **Prev** to enter the System Menu.
3. Press **Next** until **SAMPLING** is shown.
4. Turn the **Control Knob** right to turn OFF the Sampling function. Depress the **Control Knob** to accept the value.
5. Press **Program** to exit the System Menu and return to normal mode.
6. Press **Program** to re-enter Program mode.
7. Use the **Control Knob** to scroll to the desired Film # (1-9), then depress the **Control Knob** or **Next** to enter the Film Parameter menu for the selected film.
8. Press **Next** until **THK. SET** is shown, not **FINL THK**.
9. Use the **Control Knob** to set the thickness setpoint. Depress the **Control Knob** to accept the value.
10. Press **Program** to exit the Film Menu and return to normal mode.

When the Thickness Setpoint is reached, the Thk SP LED lights and the relay closes. You can use the **Zero** switch to open the relay and zero thickness at any time.

Note: The Thickness Setpoint relay is a dual function relay. It can be programmed either to indicate a thickness, or to control a sensor shutter for rate sampling. Section 2.12 discusses the Rate Sampling function. Consult Appendix C for relay wiring.

2.15 Simulate Mode

In Simulate mode, the SQM-160 simulates attached sensors. It is an easy way to become familiar with the SQM-160 front panel controls and programming. You can open/close the shutter to simulate deposition, zero readings, and display crystal life. You can also test the Time and Thickness setpoint relays and LEDs.

To enter Simulate mode:

1. Press **Program** to enter Program mode.
2. Press **Prev** to enter the System Menu.
3. Press **Next** until **SIM MODE** is shown.
4. Turn the **Control Knob** left or right to enable and disable Simulate mode.
5. Depress the **Control Knob** to accept the value.
6. Press **Program** to exit the System Menu and return to normal mode.

2.16 Relay Operation

The four relays of the SQM-160 are physically single-pole, normally-open (1FormA) relays. However, each can be programmed to act as either normally-open or normally-closed during SQM-160 operation. It is important to keep in mind that all relays will open if the SQM-160 is turned off or loses power. Consult Appendix C for relay wiring.

To set the relay operating mode:

1. Press **Program** to enter Program mode.
2. Press **Prev** to enter the System Menu.
3. Press **Next** until **RELAYS** is shown.
4. Turn the **Control Knob** left or right to select NO (normally open) or NC (normally closed). Depress the **Control Knob** to accept the value.
5. Repeat Step 4 for each of the installed sensors.
6. Press **Program** to exit the System Menu and return to normal mode.

2.17 Analog Output Configuration

The SQM-160 analog outputs must be set to match the device that will be attached to the Rate or Thickness output.

To set up the analog outputs in the System Menu:

1. Press **Program** to enter Program mode.
2. Press **Prev** to enter the System Menu.
3. Use **Next** to move through the system parameters until **R/T BND** is displayed.
4. Depress the **Control Knob** to display **RATE MIN**.
5. Adjust the **Control Knob** to the Rate desired for a 0V output.
6. Depress the **Control Knob** to save the value and display the **RATE MAX** setting.
7. Adjust the **Control Knob** to the Rate desired for a 5V output.
8. Depress the **Control Knob** to save the value and display the **THICK MIN** setting.
9. Repeat steps 5-8 to adjust the Thickness output values.
10. Press **Program** to exit the System Menu and return to normal mode.

Refer to System Menu in Chapter 2 for more information on setting SQM-160 System parameters.

2.18 Troubleshooting

Most SQM-160 problems are caused by defective crystals or improper film setup. Follow the procedures below to identify and correct common problems.

No Reading, or Erratic Readings from Sensors:

First, replace the quartz crystal. Crystals sometimes fail unexpectedly, or exhibit erratic frequency shifts (mode hopping) before total failure. Depending on the material, crystals may fail well before the 5 MHz lower limit. If you find that crystals consistently fail early, you may want to set Freq Min to a value higher than 5 MHz.

Verify that the sensors, oscillator and cabling are connected as shown in Section 1.4.

Next, in the System Menu, assure that Sim Mode is OFF, Dsp Freq is ON, and Freq Min/Max are set properly (typically Freq Min=5.0 MHz, Freq Max=6.0 MHz).

FMIN: _____

FMAX: _____

In the Film menu, assure that Sens Avg is set for the proper inputs as described in Section 2.4. When an input is selected, its LED will be on (crystal OK) or blinking (crystal defective). Record the LED state (on/off/blinking) below:

INPUT 1: _____

INPUT 2: _____

While not depositing, observe the frequency display for each active sensor. The value should be stable within, say 1Hz..

FREQ 1: _____

FREQ 2: _____

If the sensor reading is outside the frequency limits: Replace the crystal, or reprogram the Freq Min/Max values.

If the sensor reading is zero or unstable: Recheck the wiring from the sensor to the SQM-160, and verify that the SQM-160 is properly grounded. Especially check that the quartz crystal is properly seated in the sensor head. Try a different SQM-160 sensor input. If both SQM-160 inputs show zero or unstable readings, the problem is almost certainly a wiring or sensor problem.

If the problem is not corrected: Referring to Section 1.4, disconnect the 6" BNC cable from the external oscillator module. A 5.5 MHz test crystal and BNC barrel adapter is supplied with each oscillator. Attach the test crystal to the oscillator Sensor connector. The display should read about 5.5 MHz, very stable. If not, contact Sigma Instruments' technical support. Test all SQM-160 inputs.

FREQ 1: _____

FREQ 2: _____

When the frequency reading is stable, start the deposition process. As material is deposited on the crystal, the frequency reading should drop steadily. If not, check your source supply for erratic output. Also assure that the sensor is not too close to the source (particularly in sputtering).

Incorrect Rate or Thickness Measurement:

First complete the procedures in Section 2.14 to assure accurate frequency readings.

Set the System Menu xTooling as described in Section 2.6. Incorrect xTooling values will cause consistently low or high rate/thickness values for every material.

Once the System menu xTooling is set, set Tooling in the Film menu to 100 unless you are certain that another value is needed for a specific film.

Verify that the Density and Z-Factor values match those in the Materials Parameters Appendix. If the material is not listed, check a materials handbook. Density has a significant effect on rate/thickness calculations.

Z-Factor corrects for stresses as a crystal is coated. If accuracy deteriorates as crystals are used, verify the Z-Factor. The relationship between Z-Factor and Acoustic Impedance is discussed in the Materials Appendix.

Faint, illegible text covering the main body of the page, likely bleed-through from the reverse side of the document.

3.0 Rack Mounting

The Full Rack Extender option (PN 900-008) mounts a single SQM-160 into a full-width 19" rack space. Follow these steps to assemble the extender and mount the SQM-160:

| | |
|-----------------------------|--|
| Remove SQM-160 Mounting Ear | Determine on which side of the SQM-160 you want to attach the rack extender. If a rack-mount ear is already attached to the SQM-160 on that side, remove the two 10-32 flat head screws that mount the ear and remove the rack-mount ear. |
| Assemble the Extender | Assemble the extender "box" using the eight 6-32 flat head screws, two end panels, and two main panels. Thread two socket head captive panel screws from the inside of one side of the extender. Continue to thread the captive screws until their threads are completely exposed on one side. |
| Attach the Extender | Place the extender next to the SQM-160, and thread the captive screws into the SQM-160 threaded holes that were previously used to mount the rack ear. Tighten the captive screws to secure the extender to the SQM-160. |
| Attach the Mounting Ears | Attach the mounting ear previously removed from the SQM-160 to the extender using the same 10-32 flat head screws. If a rack-mount ear is not already attached to the SQM-160, attach it also. |
| Mount the SQM-160 | Slide the entire assembly into an empty 3½" high 19" rack-mount space. Secure the assembly with four rack screws (not supplied). |

The Half Rack Adapter kit (PN 900-014) mounts one SQM-160 to another 3½" high instrument. It consists of two rack-mount ears and a small adapter bracket. Mount one rack mount ear to the SQM-160, and the other to the second instrument. Attach the two instruments using the adapter bracket.

If you want to connect two SQM-160s side-by-side, contact INFICON for the best method in your installation.

4.0 Maintenance

WARNING: There are no adjustments or user-serviceable parts inside the SQM-160. For maintenance or repair, contact:

INFICON
Two Technology Place
East Syracuse, New York
13057 USA
Tel +1.315.434.1100
Fax +1.315.437.3803

4.1 Cleaning

Use a soft cloth, moistened with water or a mild cleaner, to clean the outer surfaces.

Faint, illegible table with multiple columns and rows, possibly a periodic table or technical data table.

A. Material Parameters

In the table below, an * is used to indicate that the material's Z Factor is not known. A method of determining Z Factor empirically follows the materials table.

| Formula | Density | Z-Ratio | Material Name |
|---------------------------------|---------|---------|--------------------------|
| Ag | 10.500 | 0.529 | Silver |
| AgBr | 6.470 | 1.180 | Silver Bromide |
| AgCl | 5.560 | 1.320 | Silver Chloride |
| Al | 2.700 | 1.080 | Aluminum |
| Al ₂ O ₃ | 3.970 | 0.336 | Aluminum Oxide |
| Al ₄ C ₃ | 2.360 | *1.000 | Aluminum Carbide |
| AlF ₃ | 3.070 | *1.000 | Aluminum Fluoride |
| AlN | 3.260 | *1.000 | Aluminum Nitride |
| AlSb | 4.360 | 0.743 | Aluminum Antimonide |
| As | 5.730 | 0.966 | Arsenic |
| As ₂ Se ₃ | 4.750 | *1.000 | Arsenic Selenide |
| Au | 19.300 | 0.381 | Gold |
| B | 2.370 | 0.389 | Boron |
| B ₂ O ₃ | 1.820 | *1.000 | Boron Oxide |
| B ₄ C | 2.370 | *1.000 | Boron Carbide |
| BN | 1.860 | *1.000 | Boron Nitride |
| Ba | 3.500 | 2.100 | Barium |
| BaF ₂ | 4.886 | 0.793 | Barium Fluoride |
| BaN ₂ O ₆ | 3.244 | 1.261 | Barium Nitrate |
| BaO | 5.720 | *1.000 | Barium Oxide |
| BaTiO ₃ | 5.999 | 0.464 | Barium Titanate (Tetr) |
| BaTiO ₃ | 6.035 | 0.412 | Barium Titanate (Cubic) |
| Be | 1.850 | 0.543 | Beryllium |
| BeF ₂ | 1.990 | *1.000 | Beryllium Fluoride |
| BeO | 3.010 | *1.000 | Beryllium Oxide |
| Bi | 9.800 | 0.790 | Bismuth |
| Bi ₂ O ₃ | 8.900 | *1.000 | Bismuth Oxide |
| Bi ₂ S ₃ | 7.390 | *1.000 | Bismuth Trisulfide |
| Bi ₂ Se ₃ | 6.820 | *1.000 | Bismuth Selenide |
| Bi ₂ Te ₃ | 7.700 | *1.000 | Bismuth Telluride |
| BiF ₃ | 5.320 | *1.000 | Bismuth Fluoride |
| C | 2.250 | 3.260 | Carbon (Graphite) |
| C | 3.520 | 0.220 | Carbon (Diamond) |
| C ₃ H ₈ | 1.100 | *1.000 | Parlyene (Union Carbide) |

Appendix

| Formula | Density | Z-Ratio | Material Name |
|---------------------------------|---------|---------|----------------------------|
| Ca | 1.550 | 2.620 | Calcium |
| CaF ₂ | 3.180 | 0.775 | Calcium Fluoride |
| CaO | 3.350 | *1.000 | Calcium Oxide |
| CaO-SiO ₂ | 2.900 | *1.000 | Calcium Silicate (3) |
| CaSO ₄ | 2.962 | 0.955 | Calcium Sulfate |
| CaTiO ₃ | 4.100 | *10~ | Calcium Titanate |
| CaWO ₄ | 6.060 | *1.000 | Calcium Tungstate |
| Cd | 8.640 | 0.682 | Cadmium |
| CdF ₂ | 6.640 | *1.000 | Cadmium Fluoride |
| CdO | 8.150 | *1.000 | Cadmium Oxide |
| CdS | 4.830 | 1.020 | Cadmium Sulfide |
| CdSe | 5.810 | *1.000 | Cadmium Selenide, |
| CdTe | 6.200 | 0.980 | Cadmium Telluride |
| Ce | 6.780 | *1.000 | Cerium |
| CeF ₃ | 6.160 | *1.000 | Cerium (III) Fluoride |
| CeO ₂ | 7.130 | *1.000 | Cerium (IV) Dioxide |
| Co | 8.900 | 0.343 | Cobalt |
| CoO | 6.440 | 0.412 | Cobalt Oxide |
| Cr | 7.200 | 0.305 | Chromium |
| Cr ₂ O ₃ | 5.210 | *1.000 | Chromium (III) Oxide |
| Cr ₃ C ₂ | 6.680 | *1.000 | Chromium Carbide |
| CrB | 6.170 | *1.000 | Chromium Boride |
| Cs | 1.870 | *1.000 | Cesium |
| Cs ₂ SO ₄ | 4.243 | 1.212 | Cesium Sulfate |
| CsBr | 4.456 | 1.410 | Cesium Bromide |
| CsCl | 3.988 | 1.399 | Cesium Chloride |
| CsI | 4.516 | 1.542 | Cesium Iodide |
| Cu | 8.930 | 0.437 | Copper |
| Cu ₂ O | 6.000 | *1.000 | Copper Oxide |
| Cu ₂ S | 5.600 | 0.690 | Copper (I) Sulfide (Alpha) |
| Cu ₂ S | 5.800 | 0.670 | Copper (I) Sulfide (Beta) |
| CuS | 4.600 | 0.820 | Copper (II) Sulfide |
| Dy | 8.550 | 0.600 | Dysprosium |
| Dy ₂ O ₃ | 7.810 | *1.000 | Dysprosium Oxide |
| Er | 9.050 | 0.740 | Erbium |
| Er ₂ O ₃ | 8.640 | *1.000 | Erbium Oxide |
| Eu | 5.260 | *1.000 | Europium |
| EuF ₂ | 6.500 | *1.000 | Europium Fluoride |

Appendix

| Formula | Density | Z-Ratio | Material | Name |
|---------------------------------|---------|---------|---------------------|------|
| Fe | 7.860 | 0.349 | Iron | |
| Fe ₂ O ₃ | 5.240 | *1.000 | Iron Oxide | |
| FeO | 5.700 | *1.000 | Iron Oxide | |
| FeS | 4.840 | *1.000 | Iron Sulfide | |
| Ga | 5.930 | 0.583 | Gallium | |
| Ga ₂ O ₃ | 5.880 | *1.000 | Gallium Oxide (B) | |
| GaAs | 5.310 | 1.590 | Gallium Arsenide | |
| GaN | 6.100 | *1.000 | Gallium Nitride | |
| GaP | 4.100 | *1.000 | Gallium Phosphide | |
| GaSb | 5.600 | *1.000 | Gallium Antimonide | |
| Gd | 7.890 | 0.670 | Gadolinium | |
| Gd ₂ O ₃ | 7.410 | *1.000 | Gadolinium Oxide | |
| Ge | 5.350 | 0.516 | Germanium | |
| Ge ₃ N ₂ | 5.200 | *1.000 | Germanium Nitride | |
| GeO ₂ | 6.240 | *1.000 | Germanium Oxide | |
| GeTe | 6.200 | *1.000 | Germanium Telluride | |
| Hf | 13.090 | 0.360 | Hafnium | |
| HfB ₂ | 10.500 | *1.000 | Hafnium Boride, | |
| HfC | 12.200 | *1.000 | Hafnium Carbide | |
| HfN | 13.800 | *1.000 | Hafnium Nitride | |
| HfO ₂ | 9.680 | *1.000 | Hafnium Oxide | |
| HfSi ₂ | 7.200 | *1.000 | Hafnium Silicide | |
| Hg | 13.460 | 0.740 | Mercury | |
| Ho | 8.800 | 0.580 | Holmium | |
| Ho ₂ O ₃ | 8.410 | *1.000 | Holmium Oxide | |
| In | 7.300 | 0.841 | Indium | |
| In ₂ O ₃ | 7.180 | *1.000 | Indium Sesquioxide | |
| In ₂ Se ₃ | 5.700 | *1.000 | Indium Selenide | |
| In ₂ Te ₃ | 5.800 | *1.000 | Indium Telluride | |
| InAs | 5.700 | *1.000 | Indium Arsenide | |
| InP | 4.800 | *1.000 | Indium Phosphide | |
| InSb | 5.760 | 0.769 | Indium Antimonide | |
| Ir | 22.400 | 0.129 | Iridium | |
| K | 0.860 | 10.189 | Potassium | |
| KBr | 2.750 | 1.893 | Potassium Bromide | |
| KCl | 1.980 | 2.050 | Potassium Chloride | |
| KF | 2.480 | *1.000 | Potassium Fluoride | |
| KI | 3.128 | 2.077 | Potassium Iodide | |

Appendix

| Formula | Density | Z-Ratio | Material Name |
|---|---------|---------|------------------------|
| La | 6.170 | 0.920 | Lanthanum |
| La ₂ O ₃ | 6.510 | *1.000 | Lanthanum Oxide |
| LaB ₆ | 2.610 | *1.000 | Lanthanum Boride |
| LaF ₃ | 5.940 | *1.000 | Lanthanum Fluoride |
| Li | 0.530 | 5.900 | Lithium |
| LiBr | 3.470 | 1.230 | Lithium Bromide |
| LiF | 2.638 | 0.778 | Lithium Fluoride |
| LiNbO ₃ | 4.700 | 0.463 | Lithium Niobate |
| Lu | 9.840 | *1.000 | Lutetium |
| Mg | 1.740 | 1.610 | Magnesium |
| MgAl ₂ O ₄ | 3.600 | *1.000 | Magnesium Aluminate |
| MgAl ₂ O ₆ | 8.000 | *1.000 | Spinel |
| MgF ₂ | 3.180 | 0.637 | Magnesium Fluoride |
| MgO | 3.580 | 0.411 | Magnesium Oxide |
| Mn | 7.200 | 0.377 | Manganese |
| MnO | 5.390 | 0.467 | Manganese Oxide |
| MnS | 3.990 | 0.940 | Manganese (II) Sulfide |
| Mo | 10.200 | 0.257 | Molybdenum |
| Mo ₂ C | 9.180 | *1.000 | Molybdenum Carbide |
| MoB ₂ | 7.120 | *1.000 | Molybdenum Boride |
| MoO ₃ | 4.700 | *1.000 | Molybdenum Trioxide |
| MoS ₂ | 4.800 | *1.000 | Molybdenum Disulfide |
| Na | 0.970 | 4.800 | Sodium |
| Na ₃ AlF ₆ | 2.900 | *1.000 | Cryolite |
| Na ₅ Al ₃ F ₁₄ | 2.900 | *1.000 | Chiolite |
| NaBr | 3.200 | *1.000 | Sodium Bromide |
| NaCl | 2.170 | 1.570 | Sodium Chloride |
| NaClO ₃ | 2.164 | 1.565 | Sodium Chlorate |
| NaF | 2.558 | 0.949 | Sodium Fluoride |
| NaNO ₃ | 2.270 | 1.194 | Sodium Nitrate |
| Nb | 8.578 | 0.492 | Niobium (Columbium) |
| Nb ₂ O ₃ | 7.500 | *1.000 | Niobium Trioxide |
| Nb ₂ O ₅ | 4.470 | *1.000 | Niobium (V) Oxide |
| NbB ₂ | 6.970 | *1.000 | Niobium Boride |
| NbC | 7.820 | *1.000 | Niobium Carbide |
| NbN | 8.400 | *1.000 | Niobium Nitride |
| Nd | 7.000 | *1.000 | Neodymium |
| Nd ₂ O ₃ | 7.240 | *1.000 | Neodymium Oxide |
| NdF ₃ | 6.506 | *1.000 | Neodymium Fluoride |

| Formula | Dens |
|--------------------------------|-------|
| Ni | 8910 |
| NiCr | 8.500 |
| NiCrFe | 8.500 |
| NiFe | 8.700 |
| NiFeMo | 8.900 |
| NiO | 7.450 |
| P ₃ N ₅ | 2.510 |
| Pb | 11.30 |
| PbCl ₂ | 5.850 |
| PbF ₂ | 8.240 |
| PbO | 9.530 |
| PbS | 7.500 |
| PbSe | 8.100 |
| PbSnO ₃ | 8.100 |
| PbTe | 8.160 |
| Pd | 12.03 |
| PdO | 8.310 |
| Po | 9.400 |
| Pr | 6.780 |
| Pr ₂ O ₃ | 6.880 |
| Pt | 21.40 |
| PtO ₂ | 10.20 |
| Ra | 5.000 |
| Rb | 1.530 |
| Rbl | 3.550 |
| Re | 21.04 |
| Rh | 12.41 |
| Ru | 12.36 |
| S8 | 2.070 |
| Sb | 6.620 |
| Sb ₂ O ₃ | 5.200 |
| Sb ₂ S ₃ | 4.640 |
| Sc | 3.000 |
| Sc ₂ O ₃ | 3.860 |
| Se | 4.810 |
| Si | 2.320 |
| Si ₃ N ₄ | 3.440 |
| SiC | 3.220 |
| SiO | 2.130 |
| SiO ₂ | 2.640 |

Appendix

| Formula | Density | Z-Ratio | Material Name |
|--------------------------------|---------|---------|-----------------------|
| Sm | 7.540 | 0.890 | Samarium |
| Sm ₂ O ₃ | 7.430 | *1.000 | Samarium Oxide |
| Sn | 7.300 | 0.724 | Tin |
| SnO ₂ | 6.950 | *1.000 | Tin Oxide |
| SnS | 5.080 | *1.000 | Tin Sulfide |
| SnSe | 6.180 | *1.000 | Tin Selenide |
| SnTe | 6.440 | *1.000 | Tin Telluride |
| Sr | 2.600 | *1.000 | Strontium |
| SrF ₂ | 4.277 | 0.727 | Strontium Fluoride |
| SrO | 4.990 | 0.517 | Strontium Oxide |
| Ta | 16.600 | 0.262 | Tantalum |
| Ta ₂ O ₅ | 8.200 | 0.300 | Tantalum (V) Oxide |
| TaB ₂ | 11.150 | *1.000 | Tantalum Boride |
| TaC | 13.900 | *1.000 | Tantalum Carbide |
| TaN | 16.300 | *1.000 | Tantalum Nitride |
| Tb | 8.270 | 0.660 | Terbium |
| Tc | 11.500 | *1.000 | Technetium |
| Te | 6.250 | 0.900 | Tellurium |
| TeO ₂ | 5.990 | 0.862 | Tellurium Oxide |
| Th | 11.694 | 0.484 | Thorium |
| ThF ₄ | 6.320 | *1.000 | Thorium.(IV) Fluoride |
| ThO ₂ | 9.860 | 0.284 | Thorium Dioxide |
| ThOF ₂ | 9.100 | *1.000 | Thorium Oxyfluoride |
| Ti | 4.500 | 0.628 | Titanium |
| Ti ₂ O ₃ | 4.600 | *1.000 | Titanium Sesquioxide |
| TiB ₂ | 4.500 | *1.000 | Titanium Boride |
| TiC | 4.930 | *1.000 | Titanium Carbide |
| TiN | 5.430 | *1.000 | Titanium Nitride |
| TiO | 4.900 | *1.000 | Titanium Oxide |
| TiO ₂ | 4.260 | 0.400 | Titanium (IV) Oxide |
| Tl | 11.850 | 1.550 | Thallium |
| TlBr | 7.560 | *1.000 | Thallium Bromide |
| TlCl | 7.000 | *1.000 | Thallium Chloride |
| TlI | 7.090 | *1.000 | Thallium Iodide (B) |
| U | 19.050 | 0.238 | Uranium |
| U ₃ O ₈ | 8.300 | *1.000 | Tri Uranium Octoxide |
| U ₄ O ₉ | 10.969 | 0.348 | Uranium Oxide |
| UO ₂ | 10.970 | 0.286 | Uranium Dioxide |
| V | 5.960 | 0.530 | Vanadium |
| V ₂ O ₅ | 3.360 | *1.000 | Vanadium Pentoxide |
| VB ₂ | 5.100 | *1.000 | Vanadium Boride |
| VC | 5.770 | *1.000 | Vanadium Carbide |
| VN | 6.130 | *1.000 | Vanadium Nitride |

Appendix

| Formula | Density | Z-Ratio | Material Name |
|---------------------------------|---------|---------|---------------------|
| VO ₂ | 4.340 | *1.000 | Vanadium Dioxide |
| W | 19.300 | 0.163 | Tungsten |
| WB ₂ | 10.770 | *1.000 | Tungsten Boride |
| WC | 15.600 | 0.151 | Tungsten Carbide |
| WO ₃ | 7.160 | *1.000 | Tungsten Trioxide |
| WS ₂ | 7.500 | *1.000 | Tungsten Disulphide |
| WSi ₂ | 9.400 | *1.000 | Tungsten Suicide |
| Y | 4.340 | 0.835 | Yttrium |
| Y ₂ O ₃ | 5.010 | *1.000 | Yttrium Oxide |
| Yb | 6.980 | 1.130 | Ytterbium |
| Yb ₂ O ₃ | 9.170 | *1.000 | Ytterbium Oxide |
| Zn | 7.040 | 0.514 | Zinc |
| Zn ₃ Sb ₂ | 6.300 | *1.000 | Zinc Antimonide |
| ZnF ₂ | 4.950 | *1.000 | Zinc Fluoride |
| ZnO | 5.610 | 0.556 | Zinc Oxide |
| ZnS | 4.090 | 0.775 | Zinc Sulfide |
| ZnSe | 5.260 | 0.722 | Zinc Selenide |
| ZnTe | 6.340 | 0.770 | Zinc Telluride |
| Zr | 6.490 | 0.600 | Zirconium |
| ZrB ₂ | 6.080 | *1.000 | Zirconium Boride |
| ZrC | 6.730 | 0.264 | Zirconium Carbide |
| ZrN | 7.090 | *1.000 | Zirconium Nitride |
| ZrO ₂ | 5.600 | *1.000 | Zirconium Oxide |

Z-Factor is used to match the acoustic properties of the material being deposited to the acoustic properties of the base quartz material of the sensor crystal.

$$Z\text{-Factor} = Z_q / Z_m$$

For example, the acoustic impedance of gold is $Z=23.18$, so:

$$\text{Gold Z-Factor} = 8.83 / 23.18 = .381$$

Unfortunately, Z Factor is not readily available for many materials. Z Factor can be calculated empirically using this method:

1. Deposit the material until Crystal Life is near 50%, or near the end of life, whichever is sooner.
2. Place a new substrate adjacent to the used quartz sensor.
3. Set QCM Density to the calibrated value; Tooling to 100%. Zero thickness.
4. Deposit approximately 1000 to 5000 Å of material on the substrate.
5. Use a profilometer or interferometer to measure the actual substrate film thickness.
6. Adjust the Z Factor of the instrument until the correct thickness reading is shown.

Appendix

Another alternative is to change crystals frequently. For a crystal with 90% life, the error is negligible for even large errors in the programmed versus actual Z Factor.

B: Specifications

M Measurement

| | |
|-------------------------------|---|
| Number of Sensors | 2 standard, 4 additional optional |
| Sensor Frequency Range | 4.0 MHz to 6.0 MHz |
| Reference Frequency Accuracy | .002% |
| Reference Frequency Stability | +/- 2ppm (total, 0 to 50°C) |
| Thickness Display Resolution | 1 Å |
| Frequency Resolution* | +/- 0.12 Hz (Std.), +/- 0.03 Hz (HiRes) |
| Rate Resolution* | 0.60 Å/s (Std.), 0.037 Å/s (HiRes) |
| Thickness Resolution* | 0.15 Å (Std.), 0.037 Å (HiRes) |

*Density = 1, Period = 4 rdgs/sec (Std.)
 10 rdgs/sec. (HiRes)

F Film Parameters

| | |
|--------------------|--------------------------------------|
| Stored Films | 99 |
| Density | 0.5 – 99.99 gm./cc |
| Tooling | 10 – 399 % |
| Z-Factor | 0.10 – 10.00 |
| Final Thickness | 0.000 – 99.99 kÅ |
| Thickness Setpoint | 0.000 – 99.99 kÅ |
| Time Setpoint | 0:00 – 99:59 mm:ss |
| Sample/Hold | 0-9999 sec. |
| Sensor Average | Any combination of installed sensors |

S System Parameters

| | |
|----------------------|---------------------------------|
| Measurement Period | .15 to 2 sec. |
| Simulate Mode | On/Off |
| Frequency Mode | On/Off |
| Rate Resolution | .01/.1 Å/s |
| Measurement Filter | 1 to 20 readings |
| Dual Crystal 1/2 | On/Off |
| Rate Sampling | On/Off |
| RS-232 Baud Rate | 2.4/4.8/9.6/19.2 kb/s |
| Etch Mode | On/Off |
| Crystal Tooling 1-6 | 10-399 % |
| Crystal Fail Min/Max | 4.0 to 6.0 MHz / 4.1 to 6.1 MHz |

Appendix

Digital I/O

| | |
|----------------|--|
| Digital Inputs | 4 |
| Functions | Open Shutter Close Shutter Zero Thickness Zero Time |
| Input Rating | 5VDC, non-isolated |

Relay Outputs


| | |
|--------------|---|
| Functions | 4 Shutter Sample/Hold or Thickness Setpoint Dual Sensor Shutter or Time Setpoint Crystal Fail |
| Relay Rating | 30Vrms or 30VDC, 2A maximum |

General Specifications

| | |
|-------------------------|---|
| Mains Power Supply | 100-120/200-240~, ±10% nominal 50/60 Hz |
| Power Consumption | 20W |
| Operating Environment | 0°C to 50°C 0 to 80% RH non-condensing 0 to 2,000 meters Indoor Use Only Class 1 Equipment (Grounded Type) Suitable for Continuous Operation Ordinary Protection (not protected against harmful ingress of moisture) Pollution Degree 2 Installation (Overvoltage) Category II for transient overvoltages |
| Storage Environment | -40°C to 70°C |
| Rack Dimensions (HxWxD) | 88.5mm x 212.7mm x 196.9mm |
| Weight | 2.7 kg (6 pounds) |

C. I/O Connections

A 15-pin female D-sub connector is included with the instrument to connect the digital I/O to the SQM-160 Relay I/O connector. The figure below shows the solder-side pin assignments for the supplied connector.

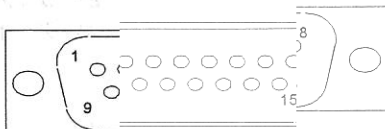

Relay I/O Connector Rear View

| Pins | Function | Description |
|----------------|---|---|
| 1,2 Relay 1 | Crystal Fail Relay | Contacts close when all enabled sensors have failed. |
| 3,4 Relay 2 | Time Setpoint, Dual Sensor, or Sensor 2 Relay | If Relay 2 is set to TIME in the System menu, contacts close when timer counts down to zero from its programmed Timer Setpoint value. If DUAL is selected, contacts close when Sensor 1 fails. If SENS2 is selected, contacts close when shutter is pushed if Sensor 2 is programmed for the active film. |
| 5,6 Relay 3 | Shutter Relay | Controlled by front panel shutter switch. Contacts close when Shutter Open is selected. If SENS2 is selected for Relay 2 in the System menu, the shutter relay contacts close only if Sensor 1 is programmed for the active film. |
| 7,8 Relay 4 | Sampling or Thickness Setpoint | If Sampling is ON in System Menu, contacts close during Sample, open during Hold. If Sampling is OFF contacts close when Thickness Setpoint is reached. |
| 9 | Zero Timer Input | Grounding this pin zeroes the setpoint timer. |
| 10 | Zero Thick Input | Grounding this pin zeroes the thickness display. |
| 11 | Close Shutter Input | Grounding this pin opens the shutter relay. |
| 12 | Open Shutter Input | Grounding this pin closes the shutter relay. |
| 13,14,15 | Ground | |

WARNING: The inputs are not isolated! The voltage level applied must be limited to between 0 and +5 volts with respect to Ground.

WARNING: Output relays are rated for 30Vrms or 30VDC, at 2A maximum. Proper fusing and adequate wiring insulation and separation should be provided to assure these limits are not exceeded.

C. Communications

Communication with a computer is by RS-232, or optional USB or Ethernet. RS-232 require a standard 9-pin straight through cable.

For USB communications, first install the SQM-160 Comm program supplied on the CD-ROM. When the SQM-160 is connected to a USB port, it will be found automatically by Windows. and installed automatically.

For Ethernet communications, the SQM-160 is supplied with a fixed address of 192.168.1.200. That address can be changed using the program on the CDROM. To change the IP address:
1. Run dgdiscvr.exe and find the unit (it may take a minute, click Refresh)
2. Double click on unit (should be highlighted)
3. Enter User Name: **root** and Password: **dbps**
4. Click Log in
5. Click Configuration, Network and set
6. Click Change IP=192.168.1.200 to your new IP address.
7. Click Apply, then Log Out

SQM-160 Comm

This Windows program allows you to set film parameters and name the SQM-160, and collect data from the instrument. The data can be downloaded to the SQM, so saved in a spreadsheet format. graphed, and also

SQM-160 Communications Protocol

The SQM-160 communicates with a host computer via an ASCII based protocol. The instrument defaults to 19200 baud, 8 data bits, and no parity. The baud rate can be changed in the System Menu of the SQM-160, but is always 8 data bits with no parity.

The basic protocol is:

<sync character> <length character> <1 to n data characters> <CRC1><CRC2>

Once a valid command has been transmitted to the SQM-160, a response is returned. The structure of the packet is identical in both the command and response. In the response, the first character is a Response Status. These are summarized in the following table.

| Response Letter | Meaning |
|-----------------|---|
| A | Command understood, normal response |
| B | Command understood, but instrument reset |
| C | Invalid command |
| D | Problem with data in command |
| E | Instrument in wrong mode for this command |

The sync character is an exclamation point '!'. Anytime this character is received, the communications for that packet is reset. Following the sync character is the length character. This is the number of characters in the packet starting with the length character and counting the 2 CRC characters. This character has a decimal 34 added to it so there cannot accidentally be a sync character embedded in the packet. The two character CRC is computed using the following algorithm:

1. The CRC is initialized to 3FFF hex.
2. Each character in the message is examined, bit by bit, and added to the CRC in the following manner:
 - a) The character is exclusive or'd with the CRC.
 - b) The CRC is shifted right one bit position.
 - c) If the character's least significant bit is a 0 then the CRC is exclusive or'd with 2001 hex.
 - d) Steps b and c are repeated for each of the 8 bits in the character.

The CRC contains 14 significant bits. This is split into two characters of 7 bits each, and then a decimal 34 is added to offset the character outside the range of the Sync Character. See the code example in the SQM-TERM.C file for an example of managing the CRC.

Appendix

Command: @

Parameters: None

Description: Returns the model number and software version number.

Example: @ AMON Ver 2.01

Command: A

Parameters: [1..99], Values | ?

Description: Film parameters. The parameters available for change or inspection are

Label, Density, Tooling, Z-Factor, Final Thickness, Thickness Setpoint, Time Setpoint, Sensor Average

The parameters are sent/retrieved in that order. The label is a maximum of 8 characters, and is terminated by a space character. If you want to send a space embedded in a Label, use an underscore character '_'. Each parameter is separated by a space.

Each film's parameters are accessed by using the ASCII character associated with film number directly after the Command. For example Film 1-9 are ASCII characters "1" (ASC 49) to "9" (ASC 57). Film 10 is a ":" character (ASC 58), etc. The parameters are edited by adding a value after the command film number.

The parameters are inspected by issuing a command, film number, then a question mark. An example of the Set/Get command for Film 4 is:

Example: A4LENS_1 6.23 125 1.05 1.525 0.450 30 1
A4? ALENS 1 6.23 125 1.05 1.525 0.450 30 1

Command: B

Description: System 1 parameters. The parameters available for change or inspection are Time Base, Simulation Mode, Frequency Mode, Rate Resolution, Rate Filter, Crystal Tooling and the parameters are sent/retrieved in that order.

Example: B? A0.25 0 0 0 8 100 100 100 100 100 100

| | |
|---|---|
| <p>Comment: A</p> <p>Parameter: (1) 001 values?</p> | <p>Description: The parameter values are stored in the parameter table. The parameter values are stored in the parameter table. The parameter values are stored in the parameter table.</p> |
| <p>Comment: B</p> <p>Parameter: (2) 002 values?</p> | <p>Description: The parameter values are stored in the parameter table. The parameter values are stored in the parameter table. The parameter values are stored in the parameter table.</p> |
| <p>Comment: C</p> <p>Parameter: (3) 003 values?</p> | <p>Description: The parameter values are stored in the parameter table. The parameter values are stored in the parameter table. The parameter values are stored in the parameter table.</p> |

Appendix

Command: C

Description: System 2 parameters. The parameters available for change or inspection are Minimum Frequency, Maximum Frequency, Minimum Rate, Maximum Rate, Minimum Thickness, Maximum Thickness, Etch Mode and the parameters are sent/retrieved in that order.

Example: C? 5.000 6.000 0.000 100.00 0.000 1.000 0

Command: D

Parameters: 1 to 9

Description: Sets the active film.

Example: D1 Set the active film to Film #1

Command: J

Parameters: None.

Description: Read the number of channels installed. The number of channels will be either an ASCII two or six.

Example: J A2 The unit has two channels available.

Command: L

Parameters: [1..6]

Description: Read the current Rate for a channel.

Example: L1 A9.32 Channel one's rate is 9.32 Angstroms/S

Command: M

Parameters: None.

Description: Read the current Average Rate.

Appendix

Example: M A10.42 Average Rate is 10.42 Angstroms/S

Command: N

Parameters: [1..6]

Description: Read the current thickness for a channel.

Example: N4 A1.187 Channel four's Thickness is 1.187 Kilo
Angstroms.

Command: O

Parameters: None.

Description: Read the current Average Thickness

Example: O A2.376 The current Average Thickness is 2.376 kilo
Angstroms.

Command: P

Parameters: [1..6]

Description: Read the current Frequency for a channel.

Example: P2 A5701563.2 Channel two's current Frequency 5701563.2Hz

Command: R

Parameters: [1..6]

Description: Read the Crystal Life for a channel.

Example: R3 A57.82 Channel three's remaining life is
57.82%.

Command: S

Parameters: None.

Appendix

Description: Zero Average Thickness and Rate.

Example: S A

Command: T

Parameters: None.

Description: Zero Time

Example: T A Zeroes time display on unit.

Command: U

Parameters: 0,1, or ?

Description: Toggles shutter open/closed or reads shutter state.

Example:

| | | |
|----|----|------------------------|
| U1 | A | Shutter is opened |
| U? | A1 | Shutter Status is open |
| U0 | A | Shutter is closed. |

Command: Y

Parameters: None.

Description: Read the Power-Up Reset flag. The Power-Up Reset flag is set during boot-up of the unit and stays set until read through the RS-232 interface. After the flag is read, it is reset and will not be set again until the unit is power cycled.

Example:

| | | |
|---|----|------------------------------|
| Y | A1 | Power-Up Reset flag is set. |
| Y | A0 | Power-Up Reset flag is reset |

Command: Z

Parameters: None.

Description: Set all Film and System menu parameters to defaults.
Note that this command can take over 1 second to complete

Appendix

Example: Z A All Film and System parameters are set to defaults.

| | | |
|--|--------------|--|
| | Component: | |
| | Parameter: | |
| | Description: | |
| | Example: | |

| | | |
|--|--------------|--|
| | Component: | |
| | Parameter: | |
| | Description: | |
| | Example: | |

| | | |
|--|--------------|--|
| | Component: | |
| | Parameter: | |
| | Description: | |
| | Example: | |

| | | |
|--|--------------|--|
| | Component: | |
| | Parameter: | |
| | Description: | |
| | Example: | |

SIGMACOM.DLL Function Descriptions

This dll acts as an interpreter between an application and the SQM160. The dll transforms function calls to specific command sequences that the unit understands.

Transfer of data to the unit, in general, requires two function calls. The first function call is to transfer the data to the unit. The data to be sent is usually contained in the function's parameter(s). The second function call is to *ChkCommDone*. This function call ensures that the data was sent properly to the unit.

Data retrieval requires three function calls. The first function call is used to tell the unit what data is being requested. The second function call is to *ChkCommDone*. This function call is used to determine when all of the data has been transferred from the unit to the dll or if an error occurred in the communications. The third function call is used to retrieve the data from the dll.

InitComm

Parameters: 16 Bit Integer, 32 Bit Integer
Return : 16 Bit Integer.

InitComm is used to initialize the dll com port. The function's first parameter is the com port number to initialize (1 - 99 are valid). The second parameter is the baud rate for the port. The function returns zero if initialization was successful or a bit flag to indicate the failure of the initialization :

- bit 0 : Communications Port handle is invalid.
- bit 1 : Communications Port Set parameters invalid (Baud Rate)
- bit 2 : Communications Port Set timeouts invalid.
- bit 3 : Communications Port Set mask invalid.
- bit 4 : Communications Port Error – Already exists.
- bit 5 : Communications Port Set Read Thread fail.
- bit 6 : Communications Port Set Read Thread priority fail.

Example:

```
ReturnVal = InitComm(1,19200)  initialize Com1 to 19200 baud
if (ReturnVal != 0)           if port did not initialize correctly
    CloseComm()               close the port
```

ClearComm

Parameters: None.
Return : 16 Bit Integer, always returns a 1.

Appendix

ClearComm is used to clear the communications buffers in the dll.

Example: `RetVal =ClearComm()` Clear the comm buffers in the dll

CloseComm

Parameters: None.

Return : 16 Bit Integer, always returns a 1.

CloseComm is used to close the currently opened communications port. *CloseComm* should always be used before attempting to open another port or before exiting the dll's calling application. The dll can have only one port open at a time.

Example:

`RetVal =CloseComm()` Close the currently open comm port

ChkCommDone

Parameters: None.

Return : 16 Bit Integer.

ChkCommDone is used to check the status of a single communications iteration. The function returns one of five different types of values:

- 1: communications not complete
- Positive integer : communications complete, value is byte count of returned message.
- 99 : communications complete, but return message incomplete due to timeout with unit.
- 98 : communications complete, but return message not valid due to a CRC error.
- 97 : communications complete, but message not understood by unit.

Example:

`RetVal =ChkCommDone()` check communications status

SendGetVers

Parameters: None.

Return : 16 Bit Integer, always returns a 1.

SendGetVers is used to retrieve the software version of the unit from the unit. This function must precede the use of the **GetVers** function

GetVers is used to retrieve the software version of the unit from the unit. This function must be preceded by the SendGetVers function. The following example shows how to use these functions.

```
Example:  
Parameter: SendGetVers  
Unit: Unit to check version  
...  
SendGetVers  
...  
GetVers  
...  
Print "Unit version: %s"  
...
```

SendGetVers is used to send a command to the unit to retrieve its software version. The function returns a string containing the version number.

```
...  
SendGetVers  
...  
GetVers  
...  
Print "Unit version: %s"  
...
```

SendGetVers is used to send a command to the unit to retrieve its software version. The function returns a string containing the version number. This function must be used before the GetVers function.

GetVers is used to retrieve the software version of the unit from the unit. This function must be preceded by the SendGetVers function. The following example shows how to use these functions.

```
...  
SendGetVers  
...  
GetVers  
...  
Print "Unit version: %s"  
...
```

GetVers

Parameters: Pointer to Null-Terminated string.

Return : 16 Bit Integer, always returns a 1.

GetVers is used to retrieve the software version of the unit from the dll. This function must be preceded by the *SendGetVers*. The Null-terminated string is used to return the version from the dll.

Example:

```
ReturnVal = SendGetVers()      tell unit to transfer version
                               to dll
do while(ChkCommDone == -1)   wait for comm to finish
ReturnVal = GetVers(&VersionString[0]) VersionString contains
                                     version info
```

Set160Film

Parameters: Pointer to a Film Structure.

Return : 16 Bit Integer, always returns a 1.

SetFilm is used to set a Film's parameters in the unit. All of the parameters are passed to the function through the Film Structure.

Example:

```
ReturnVal = SetFilm(&FilmStruct) set film parameters to
                                  FilmStruct values
do while(ChkCommDone == -1)   wait for comm to finish
```

SendGetFilm

Parameters: 16 Bit Integer.

Return : 16 Bit Integer, always returns a 1.

SendGetFilm is used to get a Film's parameters from the unit. The Film's number (1 - 9) is passed to the function. This function must precede the use of *GetFilm*.

Get160Film

Parameters: Pointer to a Film Structure.

Return : 16 Bit Integer, always returns a 1.

GetFilm is used to retrieve a Film's parameters, the film requested by *SendGetFilm*, from the dll. The parameters are passed through the Film Structure.

Example:

```
ReturnVal = SendGetFilm(FilmNum) tell unit to transfer Film #
                                  FilmNum to dll
```

Send

GetS

Send

GetN

Zero!

Appendix

ZeroStartTime is used to zero the beginning time before acquiring data with **GetAllData**.

GetAllData

Parameters: None

Return: 16-bit integer, always returns 0.

GetAllData is used to get the system parameter from the file. The return value is the size of the data in bytes.

GetData

Parameters: Pointer to a system parameter.

Return: 16-bit integer, always returns 0.

GetData is used to get the system parameter from the file. The return value is the size of the data in bytes.

Parameters: None

Return: 16-bit integer, always returns 0.

Example:

```
do while (GetData Done == 0)
    GetData = GetData
end while
```

System info

GetSystemInfo

Parameters: None

Return: 16-bit integer, always returns 0.

GetSystemInfo is used to get the system info. The return value is the size of the data in bytes.

GetSystemInfo

Parameters: None

Return: 16-bit integer, Number of channels installed.

GetSystemInfo is used to retrieve the number of channels installed from the system. The number of channels is returned by the function.

Example:

```
ReturnVal = GetSystemInfo()
ReturnVal is the number of channels
```

```
do while (GetSystemInfo Done == 0)
    GetSystemInfo = GetSystemInfo
end while
```

GetSystemInfo

Parameters: None

Return: 16-bit integer, always returns 0.

SendGetAllData

Parameters: None.

Return : 16 Bit Integer, always returns a 1.

SendGetAllData is used to get the data from the unit. This function must precede the use of the *GetAllData* function.

GetAllData

Parameter: Pointer to an AllData Structure.

Return : 16 Bit Integer, always returns a 1.

GetAllData is used to retrieve the data from the dll. The parameters are passed through the AllData Structure. If the TimeStamp parameter of the AllData structure returned is equal to -1 then the unit does not have new data available.

Example:

```
ReturnVal = ZeroStartTime()           zero the run
time
do
    ReturnVal = SendGetAllData()       tell unit to transfer
                                      AllData
    do while(ChkCommDone == -1)       wait for comm to finish
    ReturnVal = GetAllData(&AllDataStruct) AllDataStruct contains
                                      run info
    if (AllData.TimeStamp != -1) then  if new data available
        ProcessData()                 then graph or save
                                      data
while(Running)
```

SendCrystalLife

Parameters: 16 Bit Integer

Return : 16 Bit Integer, always returns a 1.

SendCrystalLife is used to get the crystal life for a channel from the unit. The parameter is the channel number to retrieve. This function must precede the use of the *CrystalLife* function.

CrystalLife

Parameters: None.

Return : Double.

CrystalLife is used to retrieve the Crystal life remaining for the channel requested by *SendCrystalLife* from the dll. The Crystal life is returned by the function.

Example:
ReturnVal = SendCrystalLife(XtalNum) tell unit to transfer Life for XtalNum
do while(ChkCommDone == -1) wait for comm to finish
ReturnVal = CrystalLife(XtalNum) ReturnVal contains Life for XtalNum

ZeroReadings

Parameters: None.
Return : 16 Bit Integer, always returns a 1.

ZeroReadings is used to command the unit to zero the rate and thickness values for all channels and the average rate and thickness.

Example:
ReturnVal =ZeroReadings() tell unit to reset Rate and Thickness
do while(ChkCommDone == -1) wait for comm sequence to finish

ZeroTime

Parameters: None.
Return : 16 Bit Integer, always returns a 1.

ZeroTime is used to command the unit to zero the system time.

Example:
ReturnVal =ZeroTime() tell unit to reset time
do while(ChkCommDone == -1) wait for comm to finish

ShutterState

Parameters: 16 Bit Integer
Return : 16 Bit Integer, always returns a 1.

ShutterState is used to command the unit to set the shutter open or closed.

Example:
ReturnVal =Shutter(0) tell unit to toggle open the shutter
do while(ChkCommDone == -1) wait for comm sequence to finish

SendGetShutter

Parameters: None.
Return : 16 Bit Integer.

SendGetShutter is used to retrieve the condition of the shutter, open or closed, from the unit.

GetShutter is used to retrieve the value of the shutter from the dll. The returned value from the function is the value of the shutter.

Example

```
ReturnVal = SendGetShutter();
do while(!ReturnDone) {
    wait for command sequence to finish
    ReturnVal = SendGetShutter();
}
```

SendGetPower

SendGetPower is used to get the value of the power up flag from the unit.

GetPower

Return: The Bit Integer, Flag value (0 = flag not set, 1 = flag set)

GetPower is used to get the value of the power up flag from the dll. The value of the flag is the return value of the function.

Example

```
ReturnVal = SendGetPower(XtUnit);
for XtUnit
    wait for command to finish
    ReturnVal = SendGetPower(XtUnit);
```

LoadDef

LoadDef is used to cause the unit to load the default values into every pin and system parameter.

Example

```
ReturnVal = LoadDef(XtUnit);
do while(!ReturnDone) {
    wait for command sequence to finish
}
```

GetShutter

Parameters: None.

Return : 16 Bit Integer, Shutter value (0 = Closed, 1 = Open).

GetShutter is used to retrieve the value of the shutter from the dll. The returned value from the function is the value of the shutter :

Example:

```
ReturnVal = SendGetShutter()    tell unit to transfer Shutter value
do while(ChkCommDone == -1)    wait for comm sequence to finish
ReturnVal = GetShutter()       ReturnVal contains Shutter value
```

SendGetReset

Parameters: None.

Return : 16 Bit Integer, always returns a 1.

SendGetReset is used to get the value of the power up reset flag from the unit.

GetReset

Parameters: None.

Return : 16 Bit Integer, Flag value (0 = flag not set, 1 = flag set).

GetReset is used to get the value of the power up reset flag from the dll. The value of the flag is the return value of the function :

Example:

```
ReturnVal = SendCrystalLife(XtalNum)  tell unit to transfer Life left
                                       for XtalNum
do while(ChkCommDone == -1)          wait for comm to finish
ReturnVal = CrystalLife()             ReturnVal contains Life left
                                       for XtalNum
```

LoadDefaults

Parameters: None.

Return : 16 Bit Integer, always returns a 1.

LoadDefaults is used to cause the unit to load the default values into every film and system parameter.

Example:

```
ReturnVal = LoadDefaults()           tell unit to load default values
do while(ChkCommDone == -1)         wait for comm sequence to finish
```


Data Structures:

The size of each data type in the structures is :
 double : 8 bytes, the LSB is thrown out before transmission to the unit.

int : 2 bytes.
 char : 1 byte.

Film Data

| | | |
|--------|---------|-------------------------|
| double | Density | film density |
| double | Tooling | film tooling |
| double | ZFactor | film zfactor |
| double | FinThk | film End Thickness |
| double | ThkSet | film Thickness Setpoint |
| double | TimeSet | film Time Setpoint |
| double | SnsAvg | Sensors to average |
| char | Name[8] | film Name |
| int | FilmNum | film Number |

System1 Data

| | | |
|--------|----------|-------------------------------------|
| double | TimeBase | simulation mode (1 = on, 0 = off) |
| double | SimMode | frequency display (1 = on, 0 = off) |
| double | FreqDisp | rate resolution (1 = hi, 0 = low) |
| double | RateRes | rate filter depth (1 - 20) |
| double | RateFilt | rate filter depth (1 - 20) |
| double | XTool[6] | six individual crystal tooling |

System2 Data

| | | |
|--------|----------|-------------------|
| double | FMin | minimum frequency |
| double | FMax | maximum frequency |
| double | RMin | minimum rate |
| double | RMax | maximum rate |
| double | TMin | minimum thickness |
| double | TMax | maximum thickness |
| double | EtchMode | Etch mode on/off |

AllData

| | | |
|--------|------------|---|
| double | TimeStamp | time relative to start time data was acquired |
| double | AvgRate | average rate |
| double | AvgThick | average thickness |
| double | ChRate[6] | up to six individual channels of rate |
| double | ChThick[6] | up to six individual channels of thickness |
| double | ChFreq[6] | up to six individual channels of frequency |

Appendix

The size of each of the following tables is given in the following table. The tables are arranged in the order of their size.

Table 1

| Table | Size | Table | Size |
|---------|------|----------|------|
| Table 1 | 100 | Table 10 | 100 |
| Table 2 | 200 | Table 11 | 200 |
| Table 3 | 300 | Table 12 | 300 |
| Table 4 | 400 | Table 13 | 400 |
| Table 5 | 500 | Table 14 | 500 |
| Table 6 | 600 | Table 15 | 600 |
| Table 7 | 700 | Table 16 | 700 |
| Table 8 | 800 | Table 17 | 800 |
| Table 9 | 900 | Table 18 | 900 |

Table 2

| Table | Size | Table | Size |
|----------|------|----------|------|
| Table 19 | 100 | Table 28 | 100 |
| Table 20 | 200 | Table 29 | 200 |
| Table 21 | 300 | Table 30 | 300 |
| Table 22 | 400 | Table 31 | 400 |
| Table 23 | 500 | Table 32 | 500 |
| Table 24 | 600 | Table 33 | 600 |
| Table 25 | 700 | Table 34 | 700 |
| Table 26 | 800 | Table 35 | 800 |
| Table 27 | 900 | Table 36 | 900 |

Table 3

| Table | Size | Table | Size |
|----------|------|----------|------|
| Table 37 | 100 | Table 46 | 100 |
| Table 38 | 200 | Table 47 | 200 |
| Table 39 | 300 | Table 48 | 300 |
| Table 40 | 400 | Table 49 | 400 |
| Table 41 | 500 | Table 50 | 500 |
| Table 42 | 600 | Table 51 | 600 |
| Table 43 | 700 | Table 52 | 700 |
| Table 44 | 800 | Table 53 | 800 |
| Table 45 | 900 | Table 54 | 900 |

Table 4

| Table | Size | Table | Size |
|----------|------|----------|------|
| Table 55 | 100 | Table 64 | 100 |
| Table 56 | 200 | Table 65 | 200 |
| Table 57 | 300 | Table 66 | 300 |
| Table 58 | 400 | Table 67 | 400 |
| Table 59 | 500 | Table 68 | 500 |
| Table 60 | 600 | Table 69 | 600 |
| Table 61 | 700 | Table 70 | 700 |
| Table 62 | 800 | Table 71 | 800 |
| Table 63 | 900 | Table 72 | 900 |

E. EC Declaration of Conformity

This is to certify that this equipment, designed and manufactured by:

**INFICON Inc.
Two Technology Place
East Syracuse, NY 13057
USA**

meets the essential safety requirements of the European Union and is placed on the market accordingly. It has been constructed in accordance with good engineering practice in safety matters in force in the Community and does not endanger the safety of persons, domestic animals or property when properly installed and maintained and used in applications for which it was made.

In addition, this is to certify that this equipment has also been designed and manufactured, having regard to the state of the art, to ensure compliance with the Protection Requirements of EMC directive 2004/108/EC.

A Technical Documentation File is also available for review by competent authorities and will be maintained for a period of ten years after the date on which the equipment was last manufactured. In addition to this file, technical, installation, maintenance and application information concerning this equipment can also be found in the Operating Manual(s) for this product or product family.

Equipment Description: SQM-160 Rate / Thickness Monitor (including all options).

Applicable Directives: 2006/95/EC (LVD)
2004/108/EC (General EMC)
2002/95/EC (RoHS)

Applicable Standards:
Safety: EN 61010-1:2001
Emissions: EN 61326-1:1997/A1: 1998/A2: 2001 (Radiated & Conducted Emissions)
Class A: Emissions per Table 3
(EMC – Measurement, Control & Laboratory Equipment)

Appendix

Immunity: EN 61326-1:1997/A1: 1998/A2: 2001 (General EMC)
Class A: Immunity per Table A1
(EMC - Measurement, Control & Laboratory Equipment)

RoHS: Fully compliant

CE Implementation Date: January 2003 (Updated December 2008)

Authorized Representative: Duane H. Wright



Operations Quality Manager, ISS
INFICON Inc.

ANY QUESTIONS RELATIVE TO THIS DECLARATION OR TO THE SAFETY OF INFICON'S PRODUCTS SHOULD BE DIRECTED, IN WRITING, TO THE VICE-PRESIDENT OF OPERATIONS AT THE ABOVE ADDRESS.

Revised 12/24/08 (Rev B)